





## Printer Installation/Operation Notice

The printer must be installed and only operate on a flat, level floor surface or print performance problems may result. Place a standard fluid level on the printer's platen surface and level the printer.

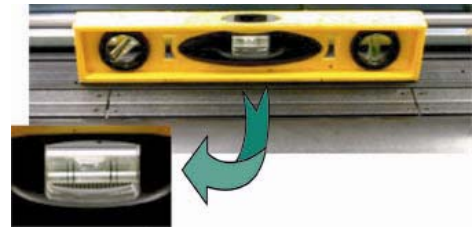

The printer must be leveled within  $\pm 1.00''$  or 25 mm of the horizontal plane; shim the printer's stand feet as required.

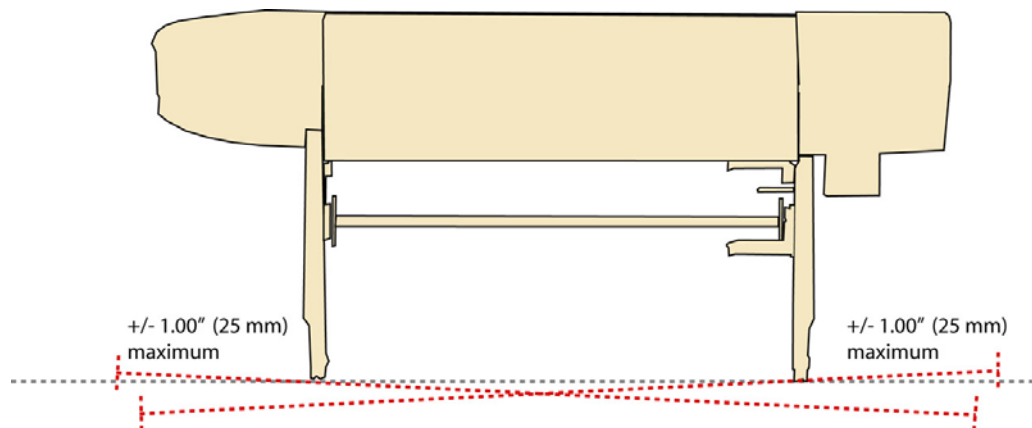

**NOTE 1:** If the printer is allowed to excessively slope toward the right, ink may accumulate at the print heads and may cause ink to wick up the flex driver cables requiring increased printer maintenance. Perform regular printer cleaning in accordance with Technical Bulletin 12 (Routine & Preventive Maintenance).

**NOTE 2:** If the printer is allowed to excessively slope toward the left, possible ink starvation problems may result in one (1) or up to all six (6) colors. This problem has been linked to random MAX INK TEMP errors, and general print head performance issues.